

Retractable Roller Banner Frame

1. Introduction:

Retractable roller banner frame is a convenient portable media for advertising or presentation. The cassette is made up of either plastic or aluminium for storing a roll of pp or vinyl banner. A spring powered roll-back mechanism is installed inside the cassette for rewinding the banner back into it automatically.

2. Setting Up the Roller Banner Frame:

2.1 Turn both stand beneath the cassette by 90 degree to make it well sit on the floor.

2.2 Assemble the 3-section folded aluminium rod to into a upright pole. Mind the sharp edge of the joint between 2 connected sections to avoid being hurt. Then plug the pole firmly into the hole at the top rear side of the cassette. The end with a plastic clutch should point upward.

2.3 Step on the stand of the cassette. Use your body weight to hold it tight on the floor. Then roll up the banner by holding the aluminium frame bar until it is buckle into the plastic clutch on the top of the pole. Beware of the sharp edge of the frame bar and the retracting force of the banner.

3. Safety Rule:

3.1 Except following the setting up instruction as mentioned in section 2. Sensible care and attention are necessary in using the roller banner frame for its sharp or acute parts and the powerful built-in spring.

3.2 Keep untrained people away from the retractable roller banner frame. Kids or pets are strictly forbidden to access to the retractable roller banner frame as they may accidentally cause the banner to be unmounted from the pole and retracted violently back into the cassette, thus hurt any person or animal nearby.

3.3 The retractable roller banner frame is not suitable for uneven floor, crowded or windy environment.

3.4 Store the frame set into the non-woven bag.

3.5 Don't attempt to disassemble the frame by your own self. Sent it to your vendor for repairing.

